

## Fork & iSkibike Steering Tube Adjustment [If Fork Wiggles or is Loose in the Steering Tube]



This photo shows the screws which must be either loosened or tightened if the fork is wiggling inside the iSkibike's steering tube. First, the lower screw is loosened, And its corresponding screw coming in from the opposite direction just below it is also loosened. In iSkibikes with adjustable stems the orientation of the 2 screws may be different, but there are 2 screws that clamp the stem around the fork tube which must be loosened slightly.

Second, the top screw [which points directly down into the top of the fork] is tightened until there is slight resistance felt while rotating the handlebars left to right. This screw is then loosened slightly until resistance to rotation is just gone. At this point the fork should rotate smoothly without any wiggle inside the steering tube.

Third, the 2 screws which were first loosen are tightened firmly.