

## Installing the iSkibike Agility 1.3 Seat

#3 Note its position & Remove the seat pin from the seat tube. Keep the center button of the seat pin pushed in fully to maintain release of the small ball bearings on the seat pin. These ball bearings do not depress to permit removal of the seat pin unless the center button is pushed in!

#2 Remove the two seat spring retention bolts.

#1 Untape the seat blocker pull bar from the frame. Note its position with the open side of the pull bar facing the seat post!

#4 Thread the two front seat frame members: a) To either side of the main iSkibike frame; b) Beneath the upward rotation blocker; c) Above the seat blocker pull bar. Then insert the seat post into the seat tube, align the upper hole of the seat post with the upper hole in the seat tube, and reinsert the seat pin. Once the seat pin is inserted on one side, USE JUST ONE HAND, with the fingers on one side of the seat pin depressing the button, place the thumb on the other side of the seat tube and squeeze the thumb and fingers together. The seat pin readily drops into place! Holding the back of the seat up, with the seat springs hanging down, reinstall the bolt holding the bottom of each spring. These bolts bottom out, be very careful not to over tighten them! First insert the washer in the spring loop, and then insert the bolt through the washer and spring loop simultaneously!

#5 DONE!! Install the skis! Go skibiking!!!

