


Unfolding the iSkibike Agility 1.5 - Page #1

#2 Untape the back of the rear suspension component & 4-bar hinge.

#3 Untape the front and rear ski binding adaptors.



#1 Remove the two inset screws and the top of both hinge caps found in the middle of the swing arm. Place the caps and screws aside for reinstallation.

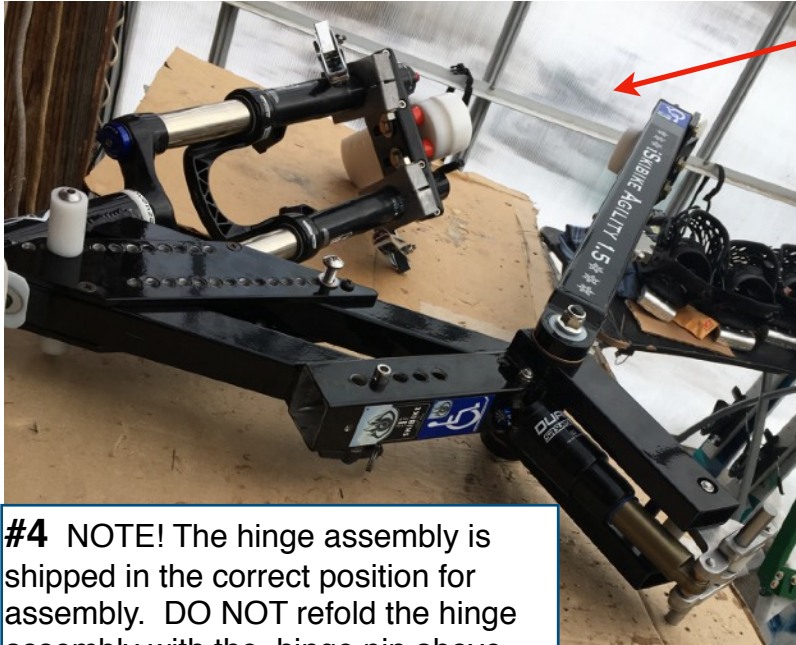

#5 Rotate the swing arm away from the front ski binding adaptor, and back towards the chrome hinge pin. The hinge caps will meet and capture the hinge pin. Replace the top of the hinge caps and tighten the screws firmly. NOTE! The hinge assembly in correct position!

#4 NOTE! The hinge assembly is shipped in the correct position for assembly. DO NOT refold the hinge assembly with the hinge pin above the shock absorber! The hinge pin is loose, and can drop free. If so, simply reinsert it into its hinge component.

